


MudSling can be installed without removing the rear wheel.

Fits: BMW F800 GS
BMW F650 GS


Parts: MudSling 2 16mm cap screws
2 zip ties 2 washers

1. PLACE THE BIKE ON ITS CENTER STAND ON LEVEL GROUND.

2. Looking up at the underseat area, remove the two existing TORX head screws with a T25 driver.

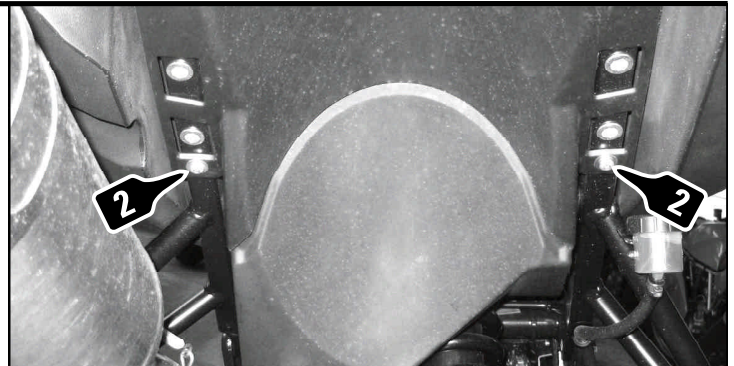


3. From the right side of the bike, position the MudSling securely against the underseat area, aligning the MudSling holes with the holes of the screws just removed. When positioned correctly, the widest areas of the MudSling will rest against the frame rails that support the footpegs.

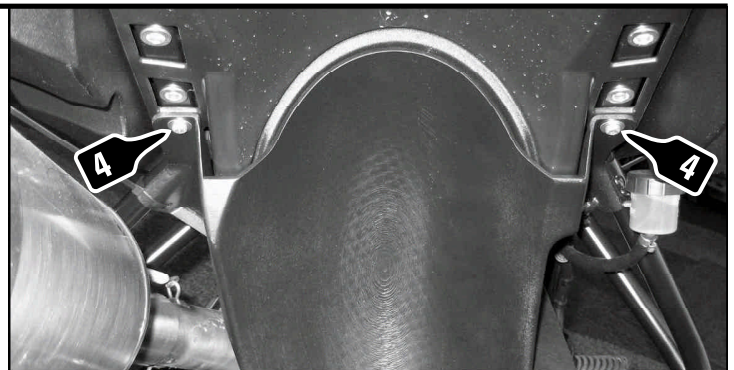


4. Re-install the TORX head screws. Or, if you have difficulty re-installing the existing screws, two longer cap screws are provided.

5. On the left side of the bike, secure the MudSling to the frame with a zip tie and trim off any excess length.

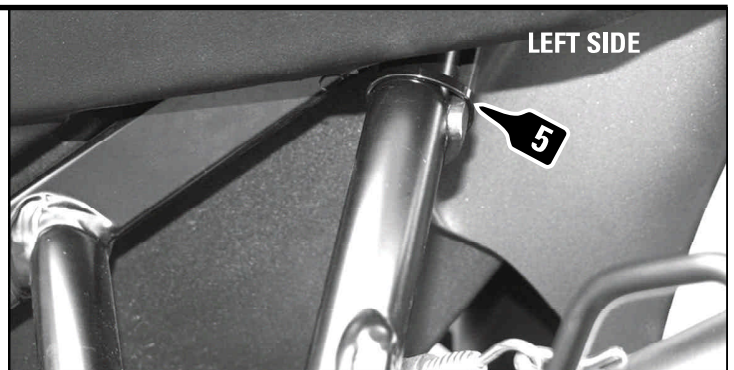

6. On the right side of the bike, feed the zip tie from the bottom side, up through the back hole of the MudSling until you see it come out from behind the square tubing. Pull it out, feed it through the front hole, cinch it up securely and trim off any excess length.

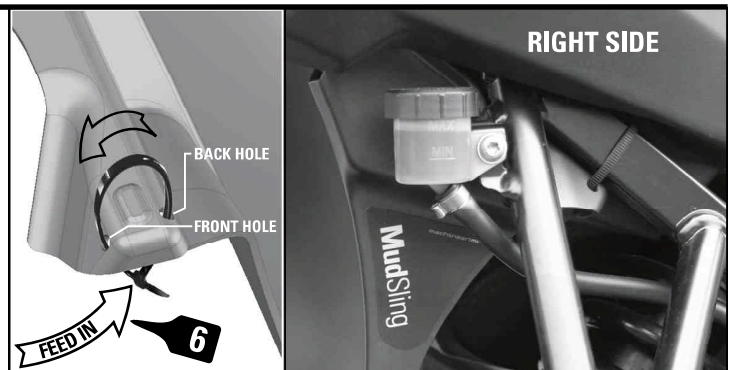

Care Instructions: Clean with soap and water. DO NOT USE chemical cleaners. Armor-All works well to restore appearance.